

IW25-4


IN Wall/ ON Wall

DEHUMIDIFIER

Maintenance Recommendations

Before servicing unit make sure unit is powered off and unplugged or circuit breaker is turned off before removing front cover for maintenance.

We recommend cleaning dehumidifier during routine HVAC servicing.

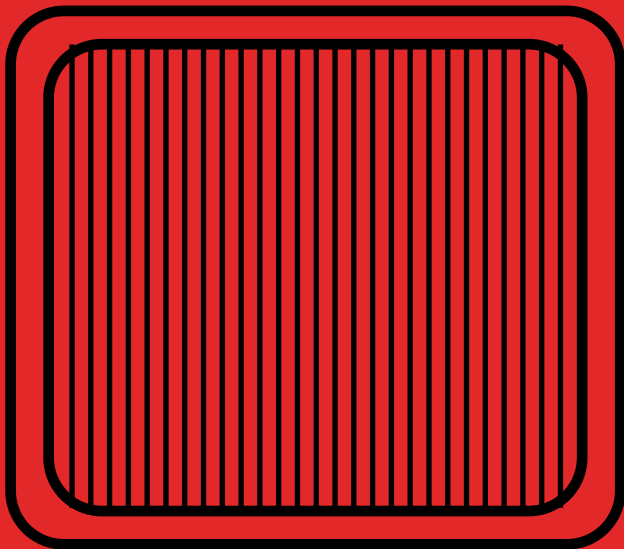

1. Clean or Change Air Filter*

- Remove the front diffuser plate to access filter
- Vacuum or lightly wash air filter to clean
- Reset filter maintenance light.

2. Wipe grill, humidity sensor, and coil fins*

- Lightly wipe or vacuum grill, humidity sensor, and coil fins to remove dust and debris with a damp cloth



3. Clean the Coils*

- Use self-rinsing, foaming coil cleaner
- Spray entire surface of the coils
- No need to rinse, dehumidification process will remove cleaner

4. Clean Airways and Drain*

- Check airways and drain hose are unblocked and connected
- Make sure collected condensate can flow continuously



*We recommend performing steps 1 & 2 monthly, steps 3 & 4 should be performed as needed or yearly.



(910) 579-3348 | HUMIDITYHAPPENS.COM